 



ROCK

RO 071..
RO 071K..
RO 075..
RO 085..
RO 081..
RO 081K..
RO 135..
RO 131..
RO 131K..

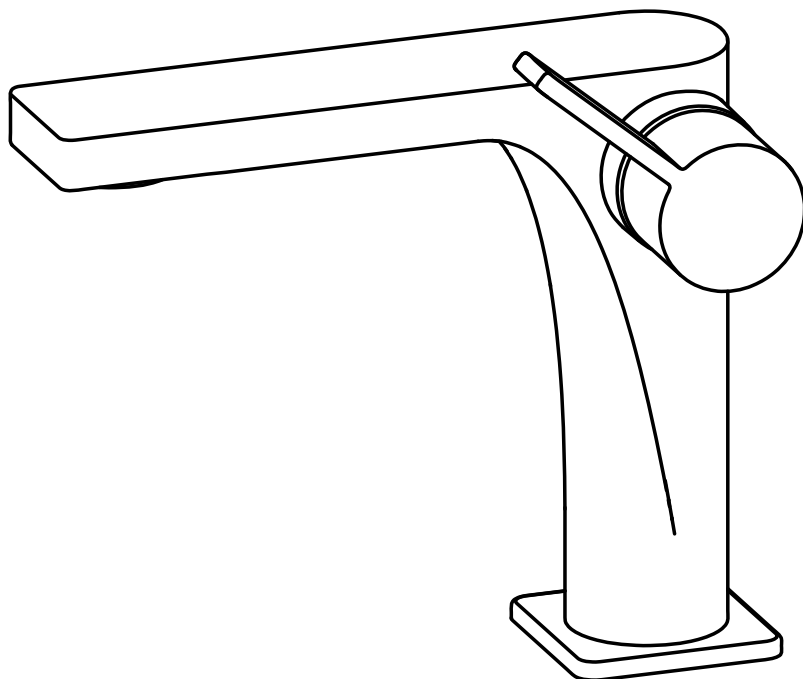

1

 
Montaggio Assembly

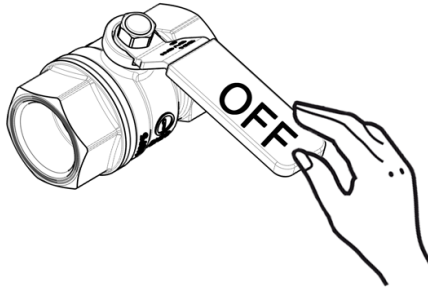


$65 \pm 5^{\circ}\text{C}$



 $15 \pm 5^{\circ}\text{C}$

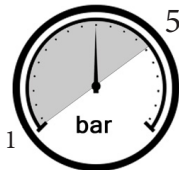

MIN - MAX

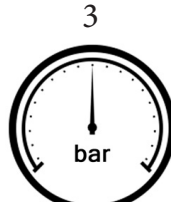 

OK

2

a

071 071K 075




081 081K 085

131 131K 135

CH 30





   b

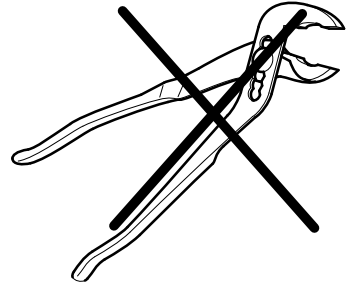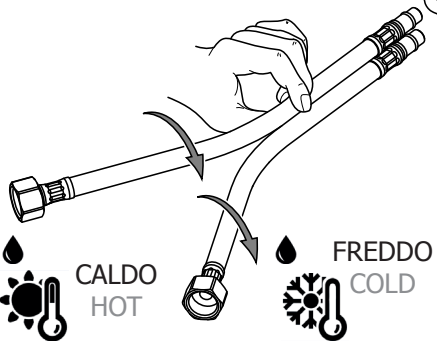
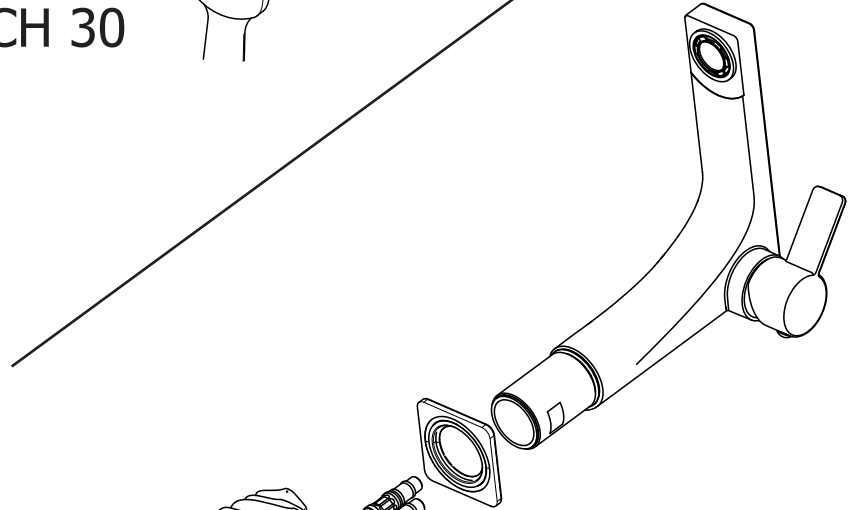


C

  071 071K 075
081 081K 085
131 131K 135

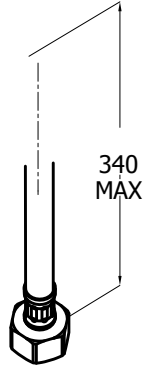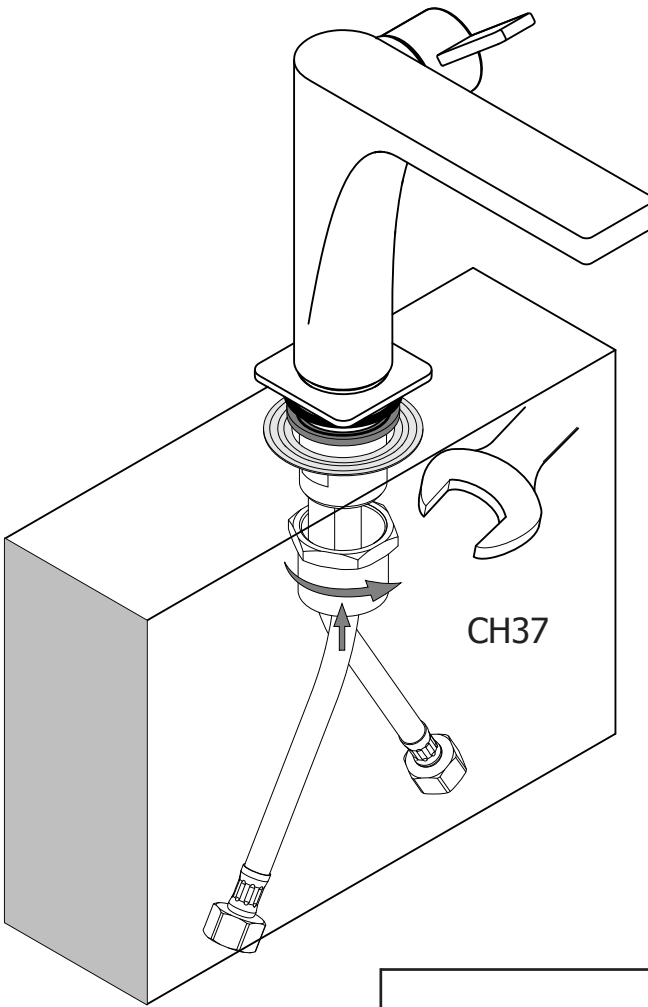

G 3/8"

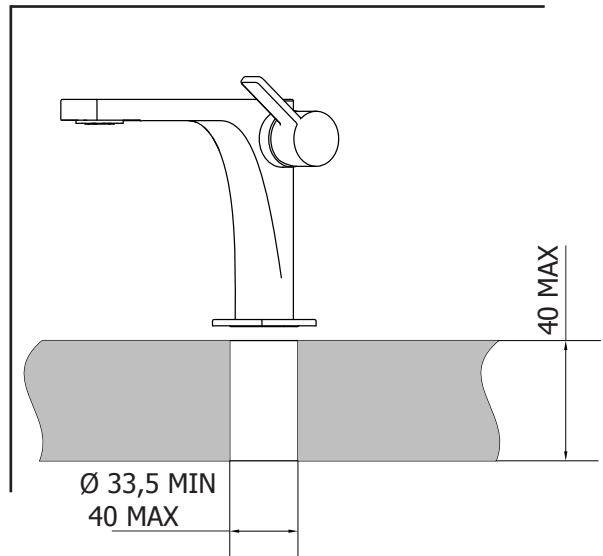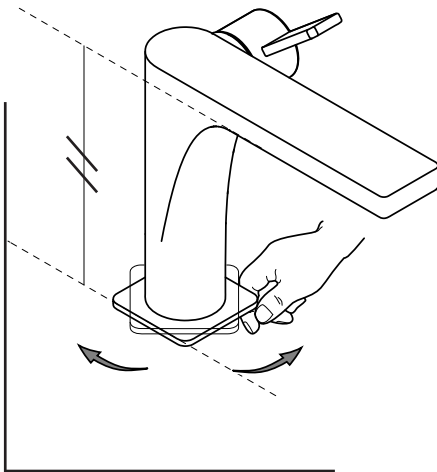  



ZSCA050..

d


071K..

081K..

 
 
131K..

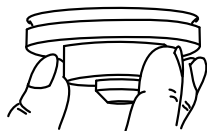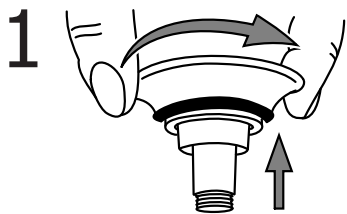


2

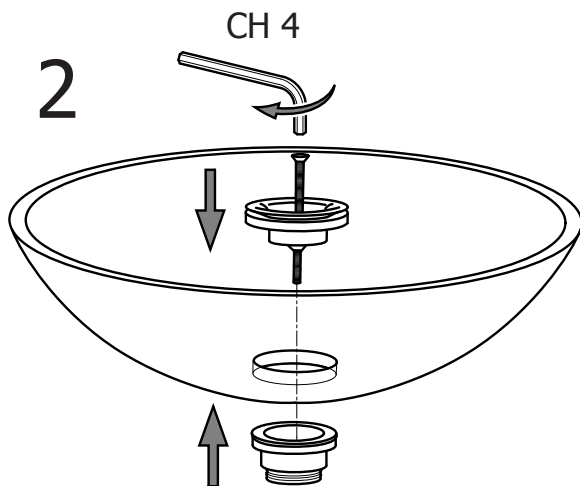 



3

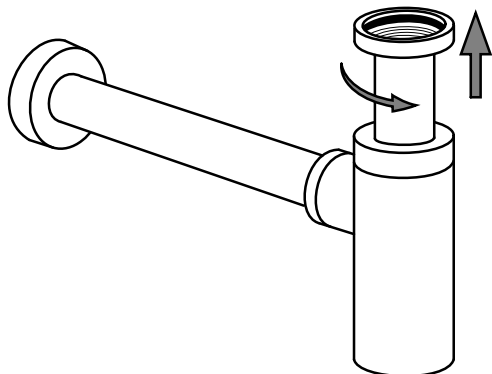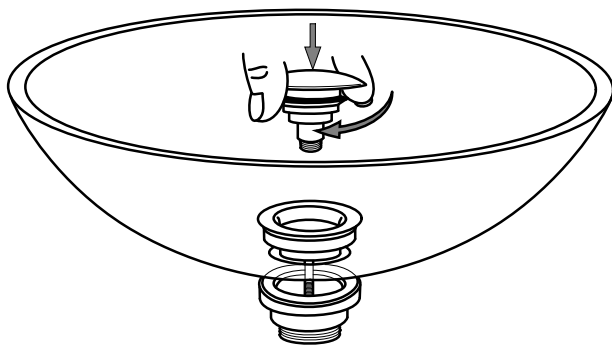  

075
085
135

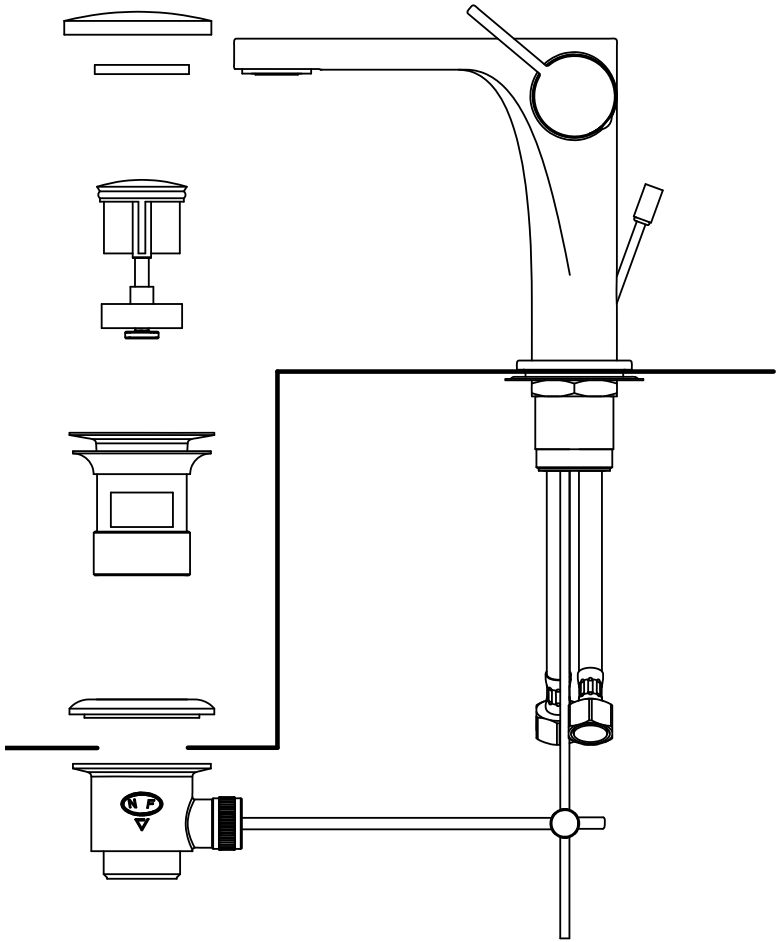 


e

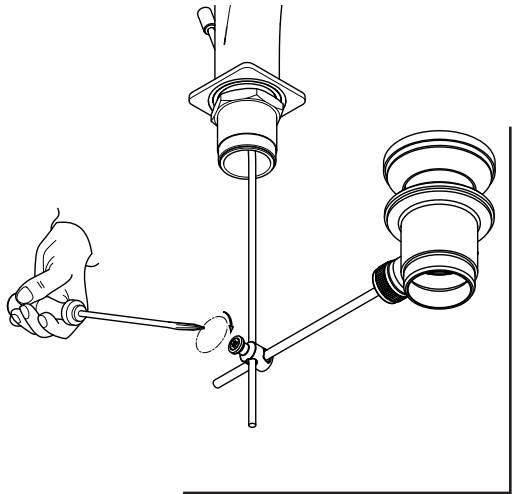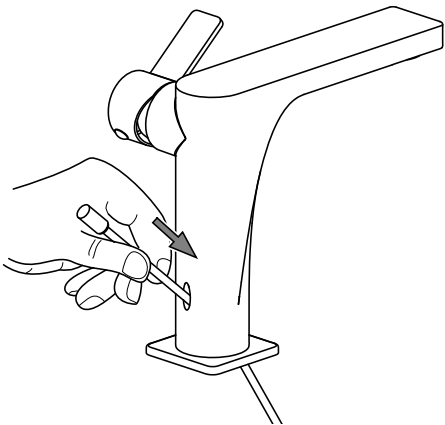  

F







Funzionamento
Working

 081
081K
085

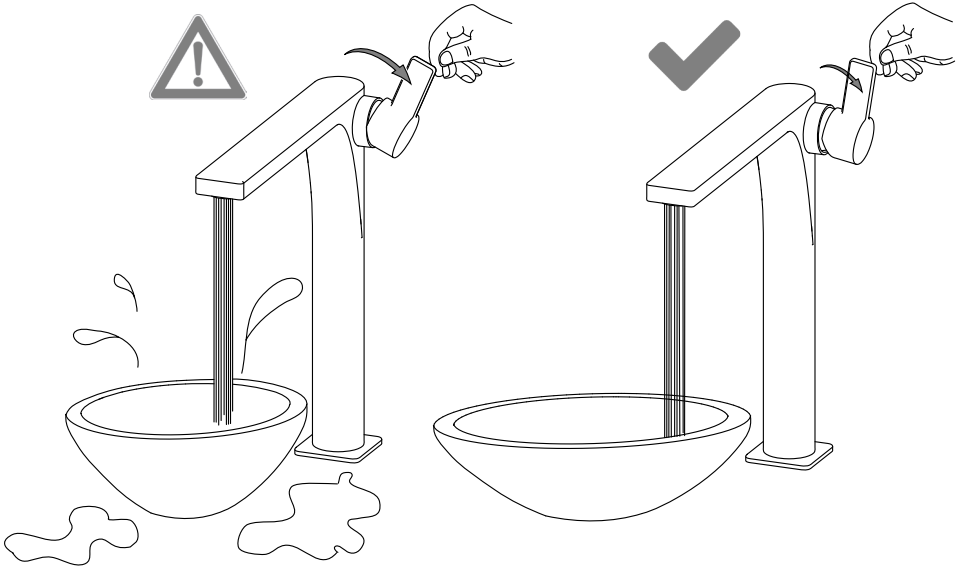

M

      Manutenzione
Service

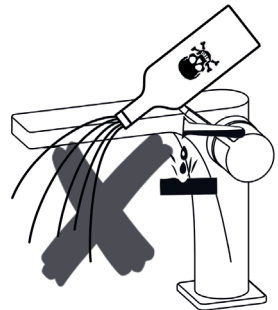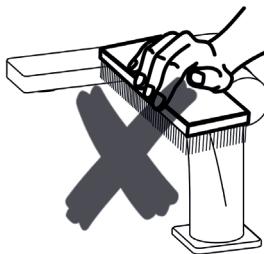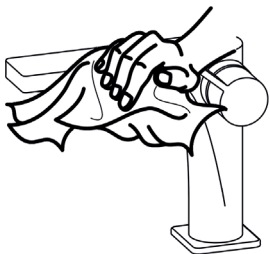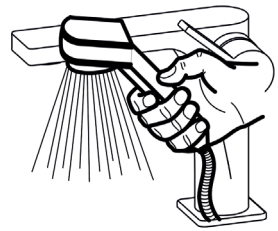
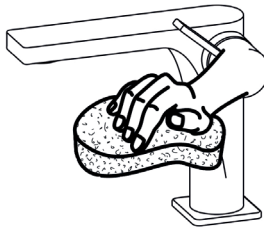
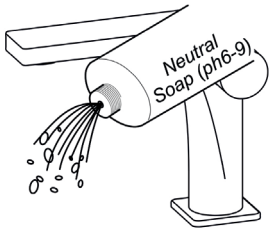


S Sostituzione Cartuccia
How to replace Cartridge

Sostituzione Aeratore
How to replace Aerator

a 071 071K 075
081 081K 085
131 131K 135

   071 071K 075
081 081K 085
131 131K 135

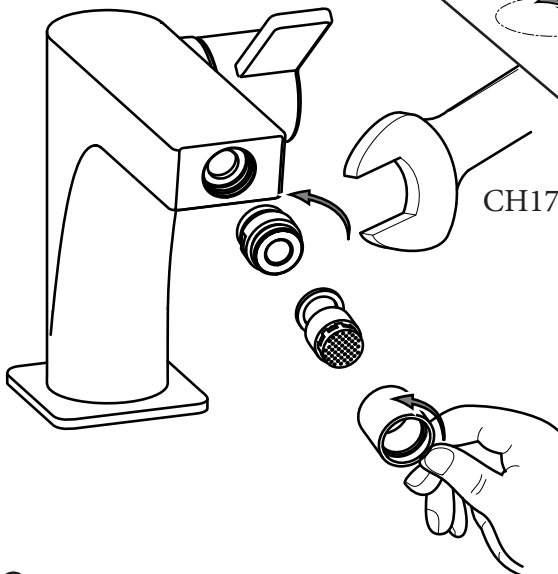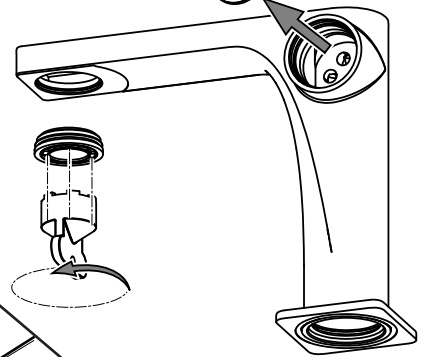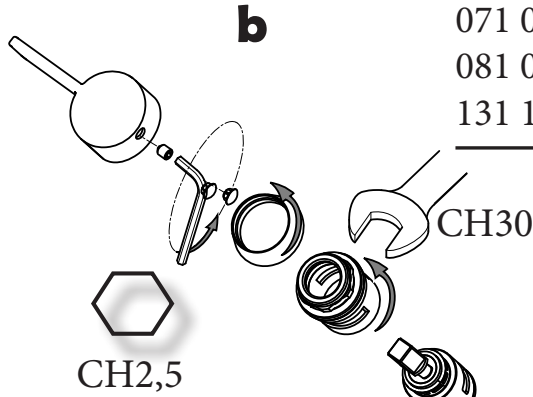

Sostituzione Snodo
How to replace Joint

131 131K 135