

RINGO / WEST

RIN 075..ES WS 075..ES

RIN 071..ES WS 071..ES

RIN 070.. WS 070..

RIN 075.. WS 075..

RIN 071.. WS 071..

RIN 072.. WS 072..

RIN 073.. WS 073..

RIN 074.. WS 074..

RIN 080.. WS 080..


RIN 085.. WS 085..

RIN 081.. WS 081..

RIN 130.. WS 130..

RIN 135.. WS 135..

RIN 131.. WS 131..

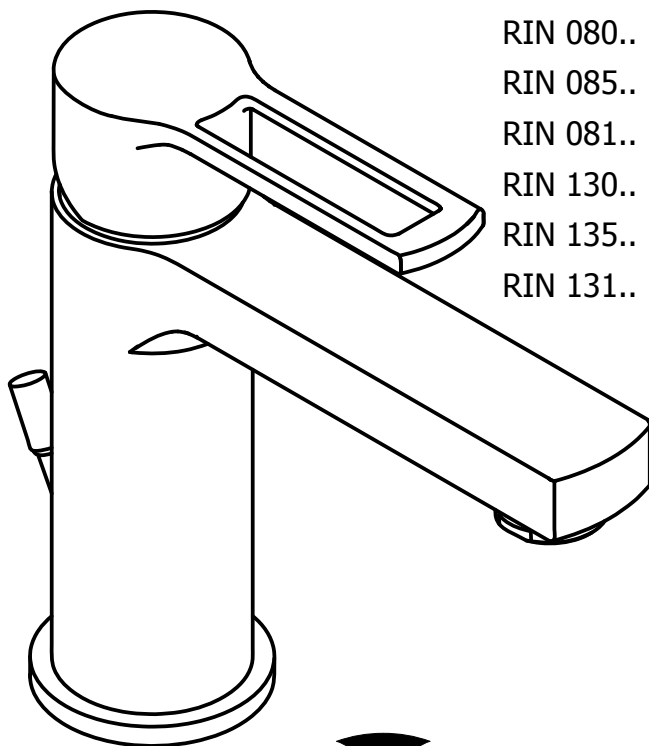

1


Montaggio Assembly



$65 \pm 5^{\circ}\text{C}$



$15 \pm 5^{\circ}\text{C}$

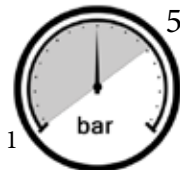


MIN - MAX



OK


2

a

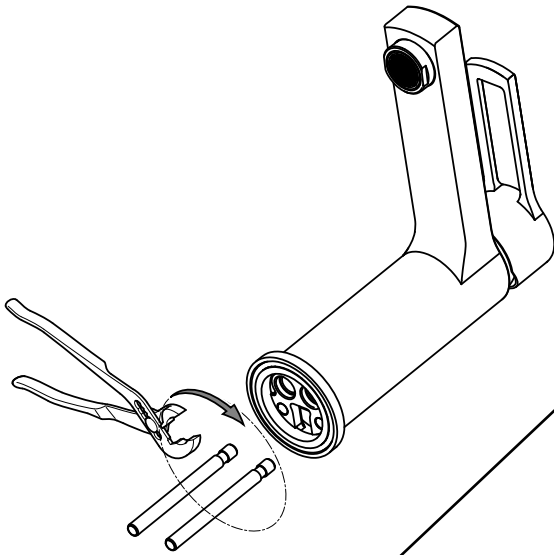

075ES 071ES
071 070 075
072 073 074
081 080 085
131 130 135

b

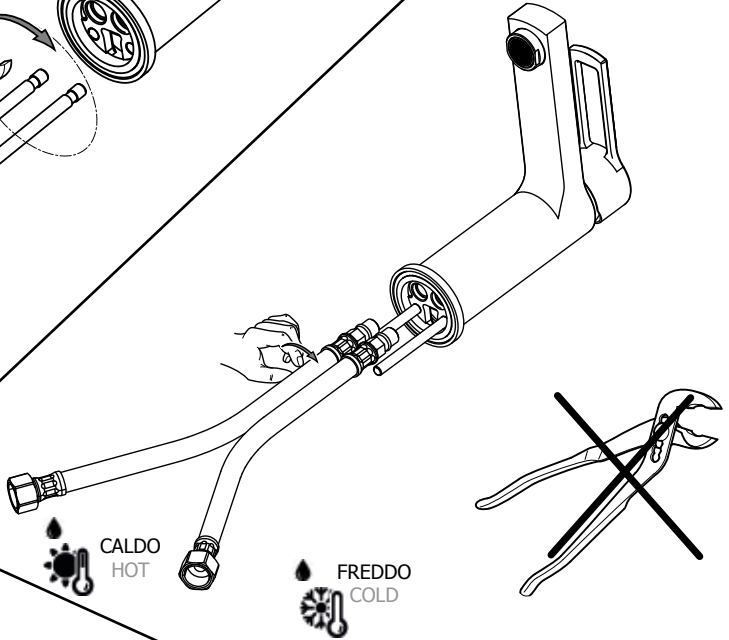


c




CALDO
HOT

FREDDO
COLD


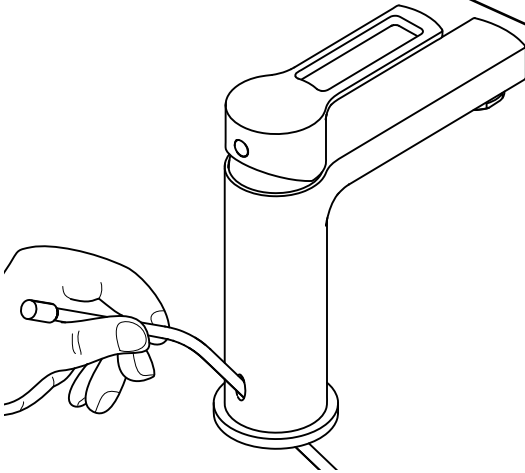


075ES
070 075
072 073
080 085
130 135

d

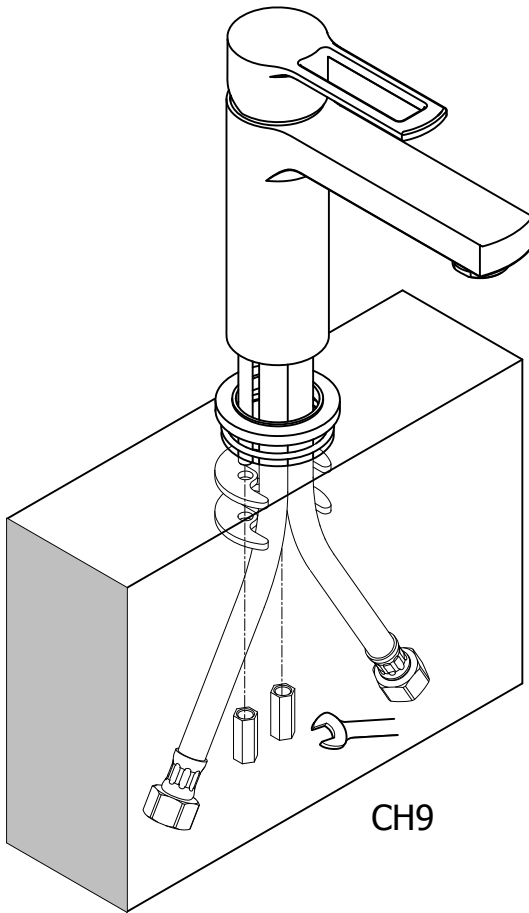




075ES 071ES
071 070 075
072 073 074
081 080 085
131 130 135

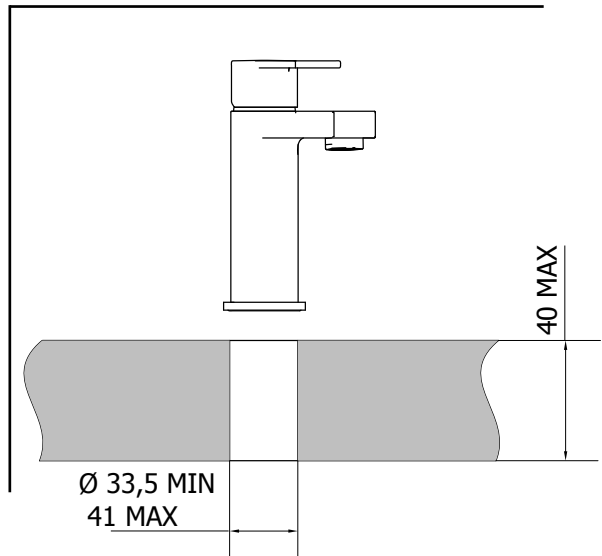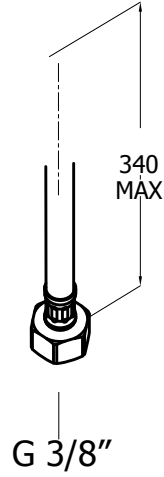

F




Funzionamento Working

075 ES
071 ES

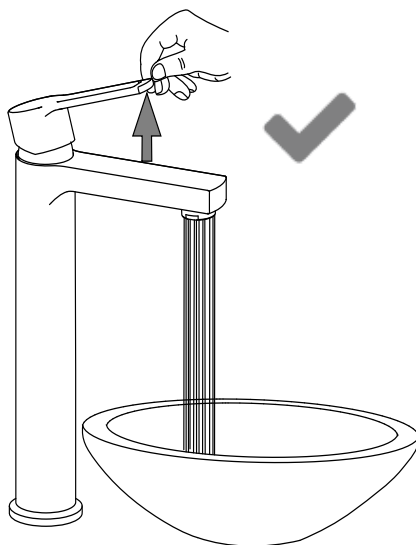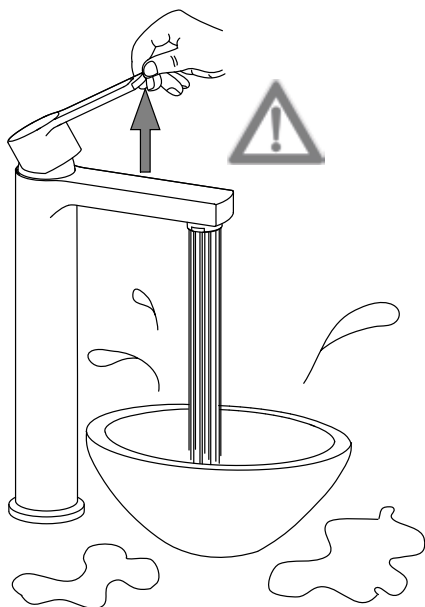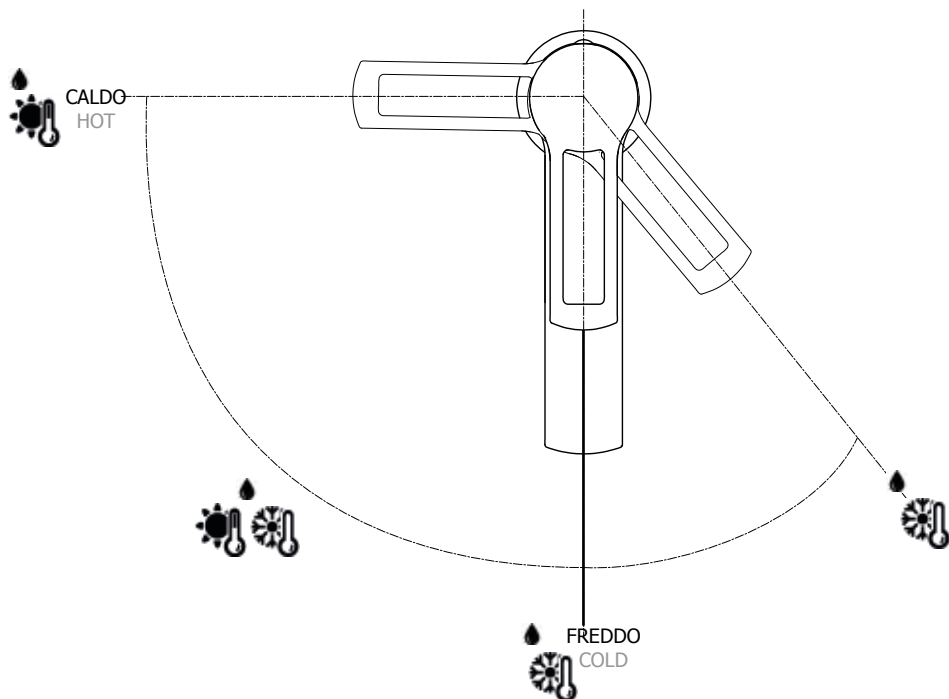


M

Manutenzione
Service

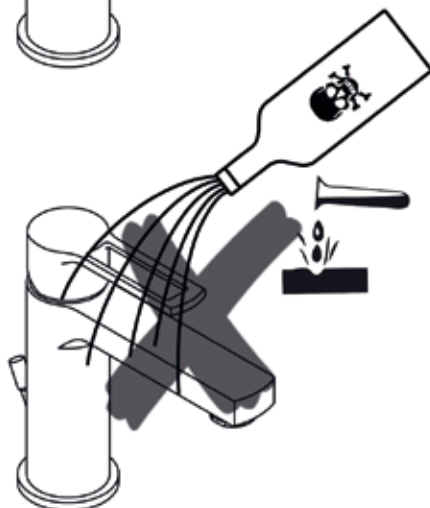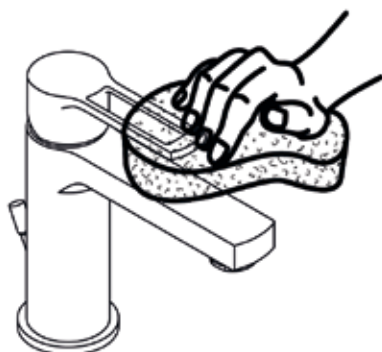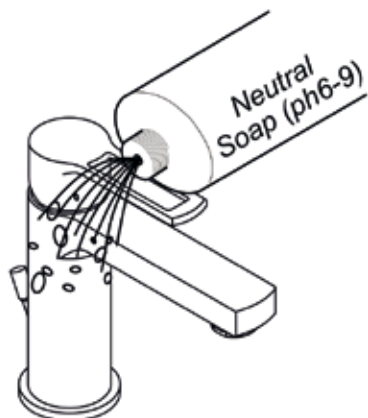


S Sostituzione Cartuccia
How to replace Cartridge

075ES 071ES
071 070 075
081 080 085
131 130 135

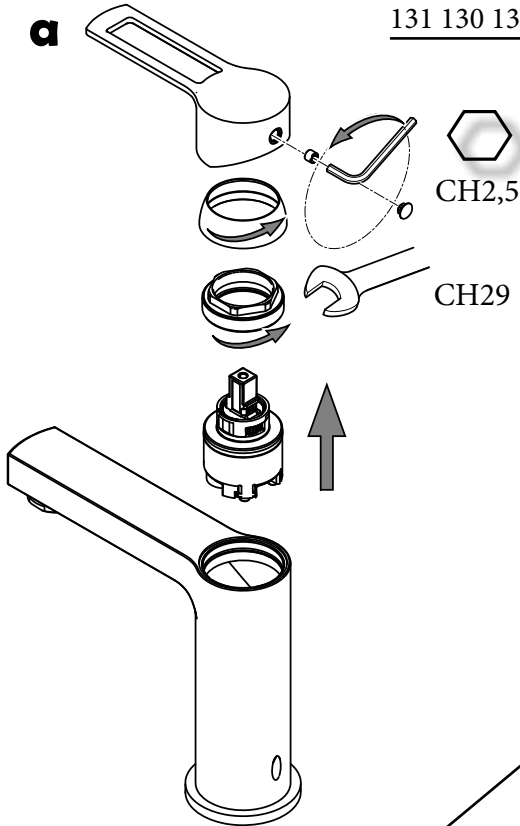

075ES 071ES
071 070 075
081 080 085
131 130 135

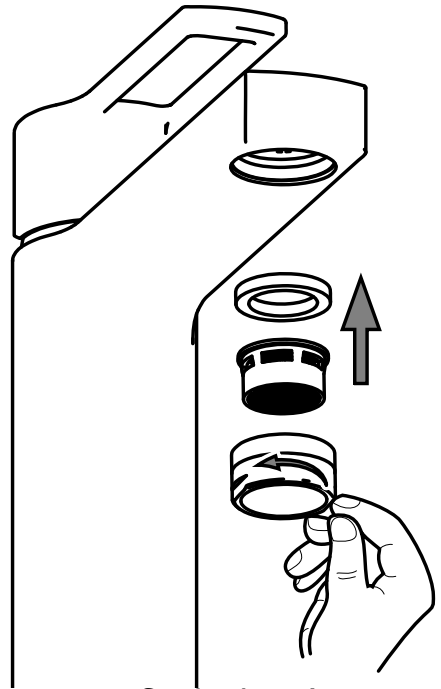

Sostituzione Aeratore
How to replace Aerator

c
Sostituzione Snodo
How to replace Joint

131 130 135

